

REPAIR PARTS

EHK Heater Kits with Fuse Blocks

EHK1-10
EHK1-15
EHK1-18
EHK1-20
EHK3-10
EHK3-15
EHK3-16
EHK3-18
EHK3-20
EHK3-30
EHK3-45

Goodman Manufacturing Company, L.P.
5151 San Felipe, Suite 500
Houston, TX 77056

www.goodmanmfg.com www.amana-hac.com

RP-439
April 2008

Important Information

Index

Functional Parts List	3
Illustration and Parts	4 - 5

Views shown are for parts illustrations only, not servicing procedures.

Text Codes:

AR - As Required

NA - Not Available

NS - Not Shown

00000000 - See Note

QTY - Quantity Example (QTY 3) (If Quantity not shown, Quantity = 1)

M - Model Example (M1) (If M Code not shown, then part is used on all Models)

Expanded Model Nomenclature:

Example

M1 - Model#1

M2 - Model#2

M3 - Model#3

Goodman Manufacturing Company, L.P. is not responsible for personal injury or property damage resulting from improper service. Review all service information before beginning repairs.

Warranty service must be performed by an authorized technician, using authorized factory parts. If service is required after the warranty expires, Goodman Manufacturing Company, L.P. also recommends contacting an authorized technician and using authorized factory parts.

Goodman Manufacturing Company, L.P. reserves the right to discontinue, or change at any time, specifications or designs without notice or without incurring obligations.

For assistance within the U.S.A. contact:

Consumer Affairs Department

Goodman Manufacturing Company, L.P.

7401 Security Way

Houston, Texas 77040

877-254-4729-Telephone

713-863-2382-Facsimile

For assistance outside the U.S.A. contact:

International Division

Goodman Manufacturing Company, L.P.

7401 Security Way

Houston, Texas 77040

713-861-2500-Telephone

713-863-2382-Facsimile

Functional Parts

Part

No:

Description:

0200-140-001P	FUSE LINK 121°C (M7, M10, M11)
0200-086-001P	FUSE LINK 93°C (M1, M2, M4, M5, M6, M9)
0200-150-001P	FUSE LINK 98°C (M3, M8)


SPECIAL PARTS

RP-439 REPAIR PARTS MANUAL

Expanded Model Nomenclature

M1 - EHK1-10
M2 - EHK1-15
M3 - EHK1-18
M4 - EHK1-20
M5 - EHK3-10
M6 - EHK3-15
M7 - EHK3-16
M8 - EHK3-18
M9 - EHK3-20
M10 - EHK3-30
M11 - EHK3-45

EHK Heater Kits with Fuse Links

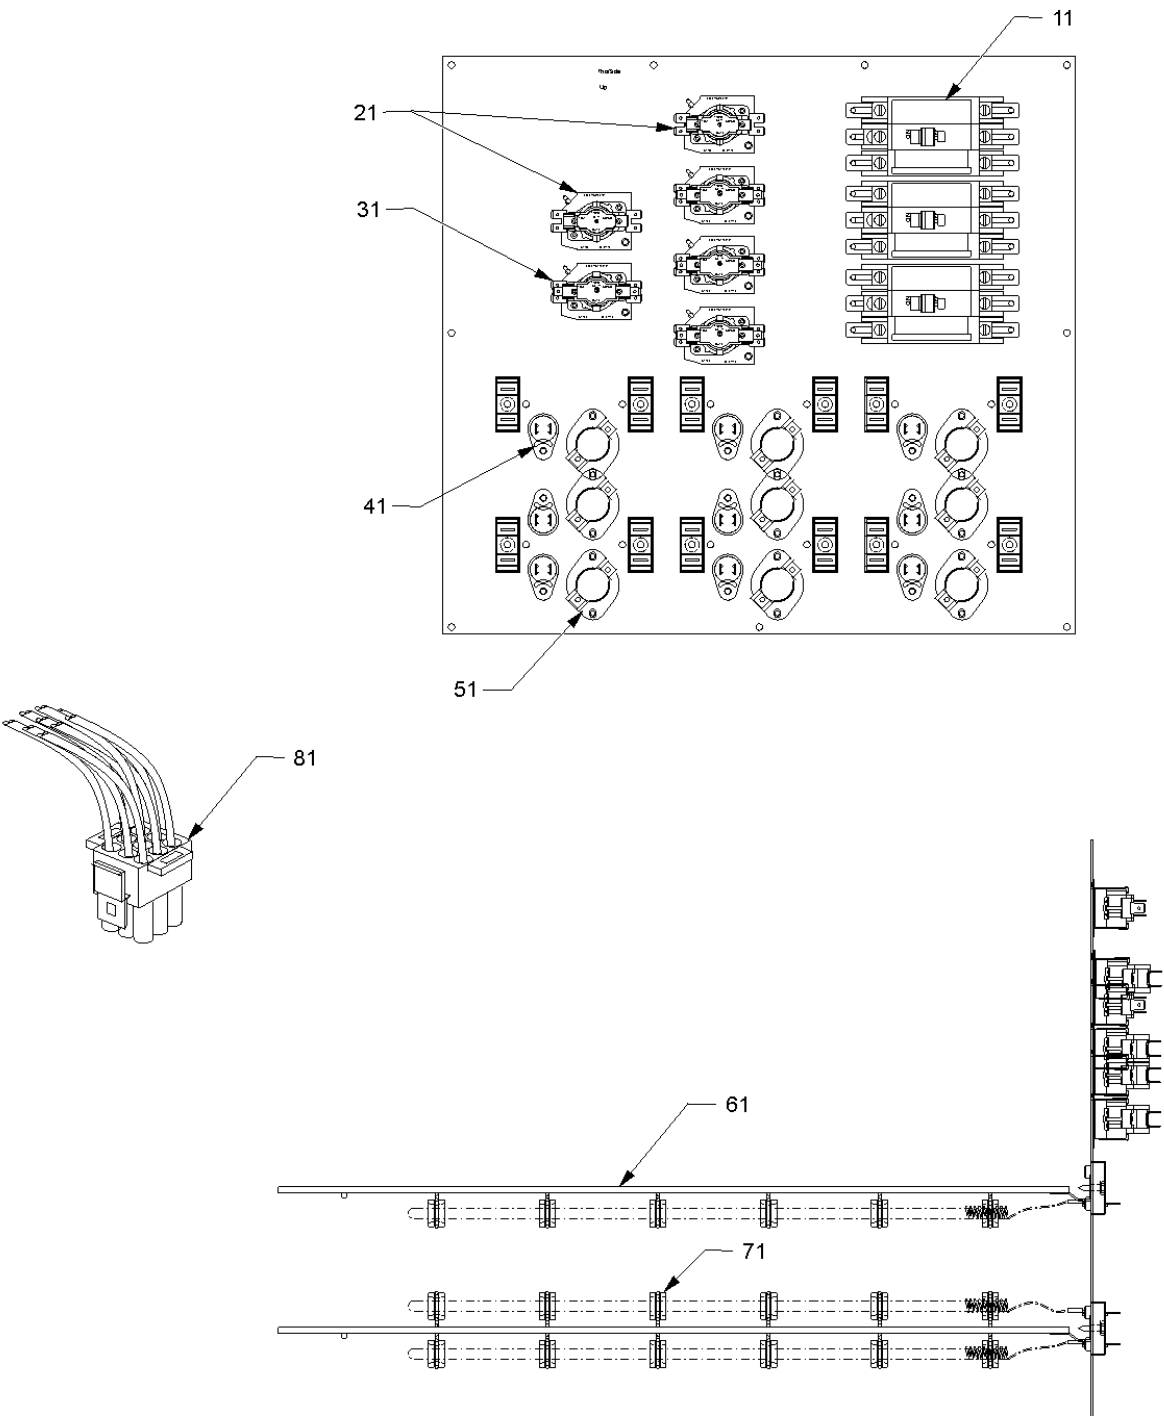

EHK Heater Kits with Fuse Links

Ref. Part No: No:	Description:	Ref. Part No: No:	Description:
<i>Image 1:</i>			
11	0200-129-004P	30 AMP CIRCUIT BREAKER 2P (M2)	
11	0200-130-008P	50 AMP CIRCUIT BREAKER 2P (M3, M6)	
11	0200-129-009P	60 AMP CIRCUIT BREAKER 2P (M1, M2, M4)	
11	0200-130-004P	60 AMP CIRCUIT BREAKER 3P (M5)	
11	0200-130-009P	60 AMP CIRCUIT BREAKER 3P (M8, M9)	
11	0200-130-007P	QOU345 CIRCUIT BREAKER (M7, M10, M11)	
21	0200-132-001P	SEQUENCER	
31	0200-131-001P	SEQUENCER	
41	0200-140-001P	FUSE LINK 121°C (M7, M10, M11)	
41	0200-086-001P	FUSE LINK 93°C (M1, M2, M4, M5, M6, M9)	
41	0200-150-001P	FUSE LINK 98°C (M3, M8)	
51	0200-054-001P	THERMOSTAT (M7, M10, M11)	
51	0200-141-001P	THERMOSTAT (M1, M2, M3, M4, M5, M6, M8, M9)	
61	5000-275-502	HEATER ELEMENT 10 KW (M1, M2, M4, M6)	
61	5000-278-501	HEATER ELEMENT 5 KW, 240V (M7, M11)	
61	5000-275-501	HEATER ELEMENT 6 KW (M5, M8, M9)	
61	5000-275-504	HEATER ELEMENT 6.65 KW (M5)	
61	5000-275-503	HEATER ELEMENT 9 KW (M3)	
71	5000-279-501	HEATER ELEMENT 10 KW, 240V (M10, M11)	
71	5000-277-501	HEATER ELEMENT 3.325 KW (M5)	
71	5000-277-502	HEATER ELEMENT 5 KW (M2, M6)	
81	0200-134-005	WIRE HARNESS ASSY (M1, M2, M3, M4, M5, M6, M7, M8, M9)	
81	0200-134-006	WIRE HARNESS ASSY (M10, M11)	
NS	RP-439	REPAIR PARTS MANUAL	
NS	0400-008-001	TINNERMAN CLIP	

Expanded Model Nomenclature

M1 - EHK1-10
M2 - EHK1-15
M3 - EHK1-18
M4 - EHK1-20
M5 - EHK3-10
M6 - EHK3-15
M7 - EHK3-16
M8 - EHK3-18
M9 - EHK3-20
M10 - EHK3-30
M11 - EHK3-45