
Heat Exchange for Light Commercial Medium Chassis

0257L00144

0257L00149

0257L00202

0257L00203

0257L00204

0257L00205

0257L00206

0257L00207

ACCESSORY PARTS LIST

RP-HXMC*



This manual is to be used by qualified technicians only.

Important Information

Index

Functional Parts List	3
Illustration and Parts	4 - 5

Views shown are for parts illustrations only, not servicing procedures

8/31/2026: updated Beckett Burner part#

Text Codes:

AR - As Required

NA - Not Available

NS - Not Shown

00000000 - See Note

QTY - Quantity Example (QTY 3) (If Quantity not shown, Quantity = 1)

M - Model Example (M1) (If M Code not shown, then part is used on all Models)

Expanded Model Nomenclature:

Example M1 - Model#1 M2 - Model#2 M3 - Model#3

Daikin Company, L.P. is not responsible for personal injury or property damage resulting from improper service. Review all service information before beginning repairs.

Warranty service must be performed by an authorized technician, using authorized factory parts. If service is required after the warranty expires, Daikin Company, L.P. also recommends contacting an authorized technician and using authorized factory parts.

Daikin Company, L.P. reserves the right to discontinue, or change at any time, specifications or designs without notice or without incurring obligations.

For assistance within the U.S.A. contact:

Equipment Support
Daikin North America, LLC
19001 Kermier Road
Waller, Texas 77484
855-770-5678-Telephone
713-863-2382-Facsimile

For assistance outside the U.S.A. contact:

International Division
Daikin North America, LLC
19001 Kermier Road
Waller, Texas 77484
713-861-2500-Telephone
713-863-2382-Facsimile

Functional Parts

Part

No:



Description:

0163L00000	BURNER BECKETT
0130F00010	FLAME SENSOR
0151L00000	GAS VALVE MANIFOLD 36H
0130L00251	IGNITOR
0130F00035	LIMIT PRIMARY (M3, M4, M5, M6)
20162904	LIMIT, PRIMARY
0130M00663	LIMIT, PRIMARY (M1, M2, M7, M8)
10123532	LIMIT-RESET MAN-GRAY (M5, M6)
10123529	LIMIT-RESET MAN-GREEN (M1, M2, M3, M4, M7, M8)
0131L00120	VENT MOTOR

Expanded Model Nomenclature

M1 - 0257L00144
M2 - 0257L00149
M3 - 0257L00202
M4 - 0257L00203
M5 - 0257L00204
M6 - 0257L00205
M7 - 0257L00206
M8 - 0257L00207

HEAT EXCHANGE ASSEMBLY

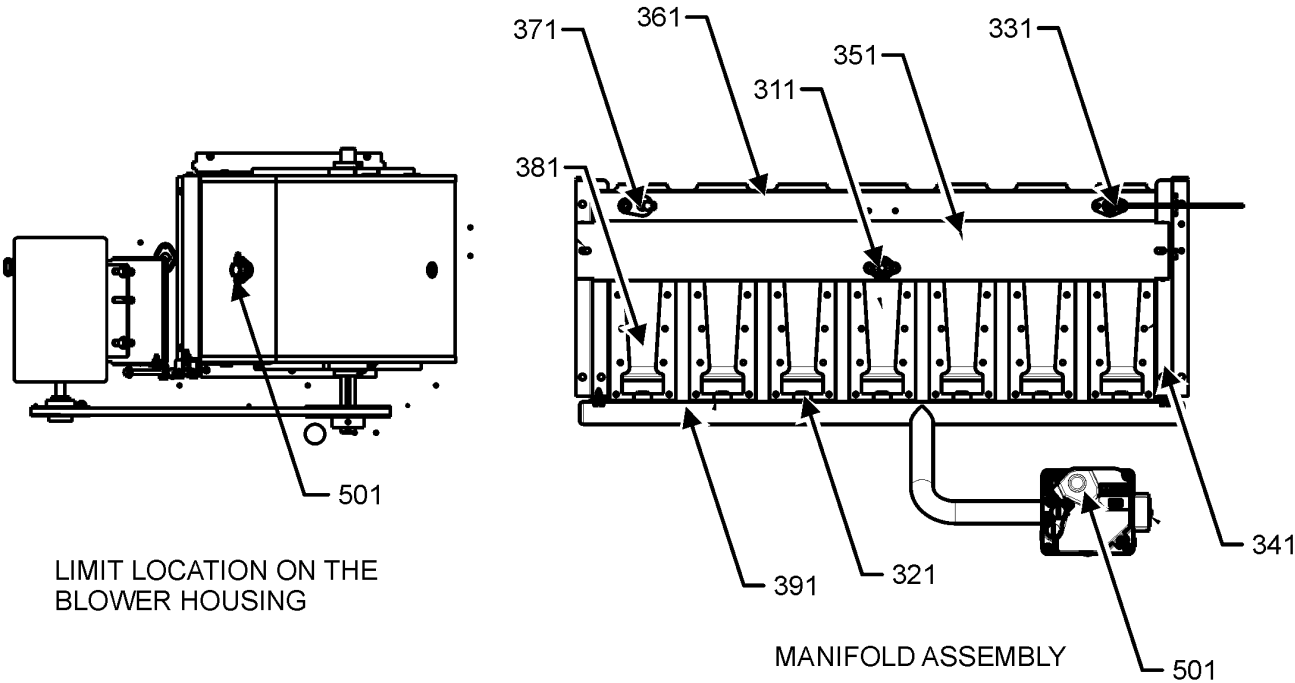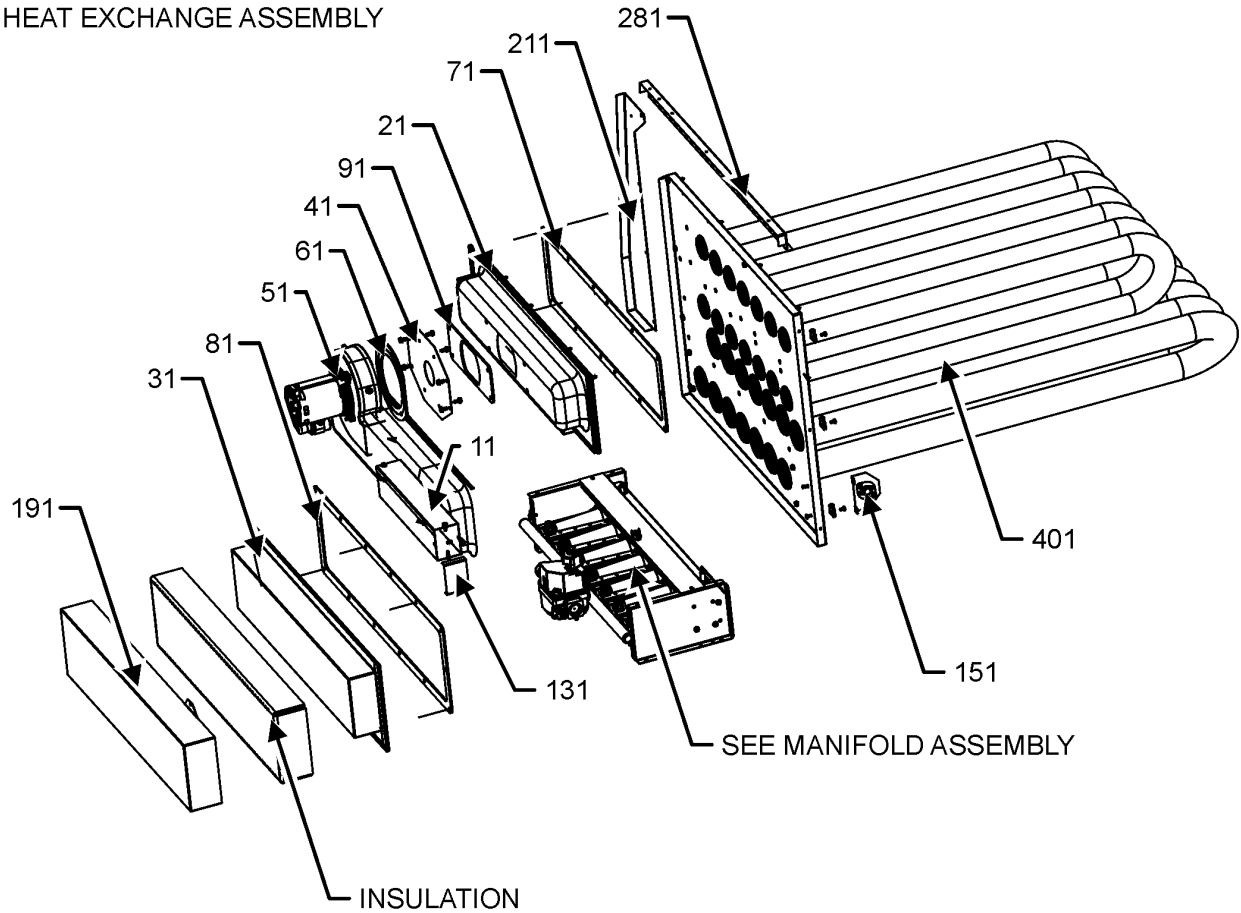

HEAT EXCHANGE ASSY MAY DIFFER FROM WHAT IS SHOWN

Ref. Part No: No:	Description:	Ref. Part No: No:	Description:
Image 1:			
11	0121L03623		FLUE HT EXCH (QTY 2)
21	0121L02892		BOX, COLLECTOR UPPER
31	0121L02893		BOX, COLLECTOR LOWER
41	0121L01706		PLATE ORIFICE 2.000"
51	0131L00120		VENT MOTOR
61	0154L00141		GASKET
71	0154L00039		GASKET
81	0154L00038		GASKET
91	0154L00040		GASKET
131	0163L00006		SCREEN FLUE
151	0130F00035		LIMIT PRIMARY (M3, M4, M5, M6)
151	0130M00663		LIMIT, PRIMARY (M1, M2, M7, M8)
191	0121L02660		COVER INSUL BOX COLL LOWER
211	0121L03220		HEAT EXCHANGER BLOCKOFF
281	0121L03221		SUPPORT BLOCKOFF HT EXCH
311	10123532		LIMIT-RESET MAN-GRAY (M5, M6)
311	10123529		LIMIT-RESET MAN-GREEN (M1, M2, M3, M4, M7, M8)
321	0163L00021		ORIFICE (QTY 7)
331	0130L00251		IGNITOR
341	0121L02998		BRACKET SUPPORT BURNER (QTY 2)
351	0121L03023		BRACKET ROLLOUT FLAME BR 7
361	0121L02690		BRACKET BURNER 7
371	0130F00010		FLAME SENSOR
381	0163L00000		BURNER BECKETT (QTY 7)
391	0163L00144		MANIFOLD
401	0270L01355		ASSY, PANEL PARTITION (M1, M3, M5, M7)
401	0270L01365		ASSY, PANEL PARTITION (M2, M4, M6, M8)
501	0151L00000		GAS VALVE MANIFOLD 36H
501	20162904		LIMIT, PRIMARY
NS	0121L02859		BRACKET, LIMIT PRIMARY
NS	0259L01055		WIRE HARNESS ASSY

Expanded Model Nomenclature

M1 - 0257L00144
M2 - 0257L00149
M3 - 0257L00202
M4 - 0257L00203
M5 - 0257L00204
M6 - 0257L00205
M7 - 0257L00206
M8 - 0257L00207