

Heat Exchange for Light Commercial Small Chassis

0257L00122
0257L00123
0257L00124
0257L00125
0257L00126
0257L00127
0257L00128
0257L00148
0257L00150
0257L00151
0257L00152
0257L00162
0257L00164
0257L00167
0257L00168
0257L00170
0257L00172
0257L00174
0257L00176
0257L00178
0257L00198
0257L00214
0257L00216
0257L00218
0257L00220
0257L00222
0257L00224
0257L00226
0257L00228
0257L00230
0257L00256
0257L00258
0257L00260
0257L00262
0257L00264
0257L00266

ACCESSORY PARTS LIST

RP-HXSC*



This manual is to be used by qualified technicians only.

Important Information

Index

Functional Parts List	3
Illustration and Parts	4 - 7

Views shown are for parts illustrations only, not servicing procedures

Text Codes:

AR - As Required

NA - Not Available

NS - Not Shown

00000000 - See Note

QTY - Quantity Example (QTY 3) (If Quantity not shown, Quantity = 1)

M - Model Example (M1) (If M Code not shown, then part is used on all Models)

Expanded Model Nomenclature:

Example M1 - Model#1 M2 - Model#2 M3 - Model#3

Daikin Company, L.P. is not responsible for personal injury or property damage resulting from improper service. Review all service information before beginning repairs.

Warranty service must be performed by an authorized technician, using authorized factory parts. If service is required after the warranty expires, Daikin Company, L.P. also recommends contacting an authorized technician and using authorized factory parts.

Daikin Company, L.P. reserves the right to discontinue, or change at any time, specifications or designs without notice or without incurring obligations.

For assistance within the U.S.A. contact:

Equipment Support
Daikin North America, LLC
19001 Kermier Road
Waller, Texas 77484
855-770-5678-Telephone
713-863-2382-Facsimile

For assistance outside the U.S.A. contact:

International Division
Daikin North America, LLC
19001 Kermier Road
Waller, Texas 77484
713-861-2500-Telephone
713-863-2382-Facsimile

Functional Parts

Part

No:

 
Description:

Expanded Model Nomenclature

0163F00017	BECKETT BURNER (QTY 2)
0130F00010	FLAME SENSOR
0151F00000P	GAS VALVE - WHITE-RODGERS 2-STAGE
20261709	IGNITOR
20162904	LIMIT, PRIMARY
20162906	LIMIT, PRIMARY (M14, M29)
20162901	LIMIT, PRIMARY (M12, M28)
0130M00658	LIMIT, PRIMARY (M17, M18, M26)
0130F00071	LIMIT, PRIMARY (M9, M15, M21, M24, M27, M32, M33, M36)
0130F00067	LIMIT, PRIMARY (M1, M7, M8, M10, M11, M16, M30)
0130F00035	LIMIT, PRIMARY (M2, M3, M4, M5, M6, M13, M19, M20, M22, M23, M25, M31, M34, M35)
0130F00123	LIMIT, RESET MAN (M8)
10123531	LIMIT-RESET MAN (M23)
10123529	LIMIT-RESET MAN-GREEN (M4, M11, M14, M28, M29, M30, M33, M35)
10123532	MANUAL RESET LIMIT 350°F (M1, M2, M3, M5, M6, M7, M9, M10, M12, M13, M15, M16, M17, M18, M19, M20, M21, M22, M24, M25, M26, M27, M31, M32, M34, M36)

M1 - 0257L00122
M2 - 0257L00123
M3 - 0257L00124
M4 - 0257L00125
M5 - 0257L00126
M6 - 0257L00127
M7 - 0257L00128
M8 - 0257L00148
M9 - 0257L00150
M10 - 0257L00151
M11 - 0257L00152
M12 - 0257L00162
M13 - 0257L00164
M14 - 0257L00167
M15 - 0257L00168
M16 - 0257L00170
M17 - 0257L00172
M18 - 0257L00174
M19 - 0257L00176
M20 - 0257L00178
M21 - 0257L00198
M22 - 0257L00214
M23 - 0257L00216
M24 - 0257L00218
M25 - 0257L00220
M26 - 0257L00222
M27 - 0257L00224
M28 - 0257L00226
M29 - 0257L00228
M30 - 0257L00230
M31 - 0257L00256
M32 - 0257L00258
M33 - 0257L00260
M34 - 0257L00262
M35 - 0257L00264
M36 - 0257L00266

HEAT EXCHANGE ASSEMBLY

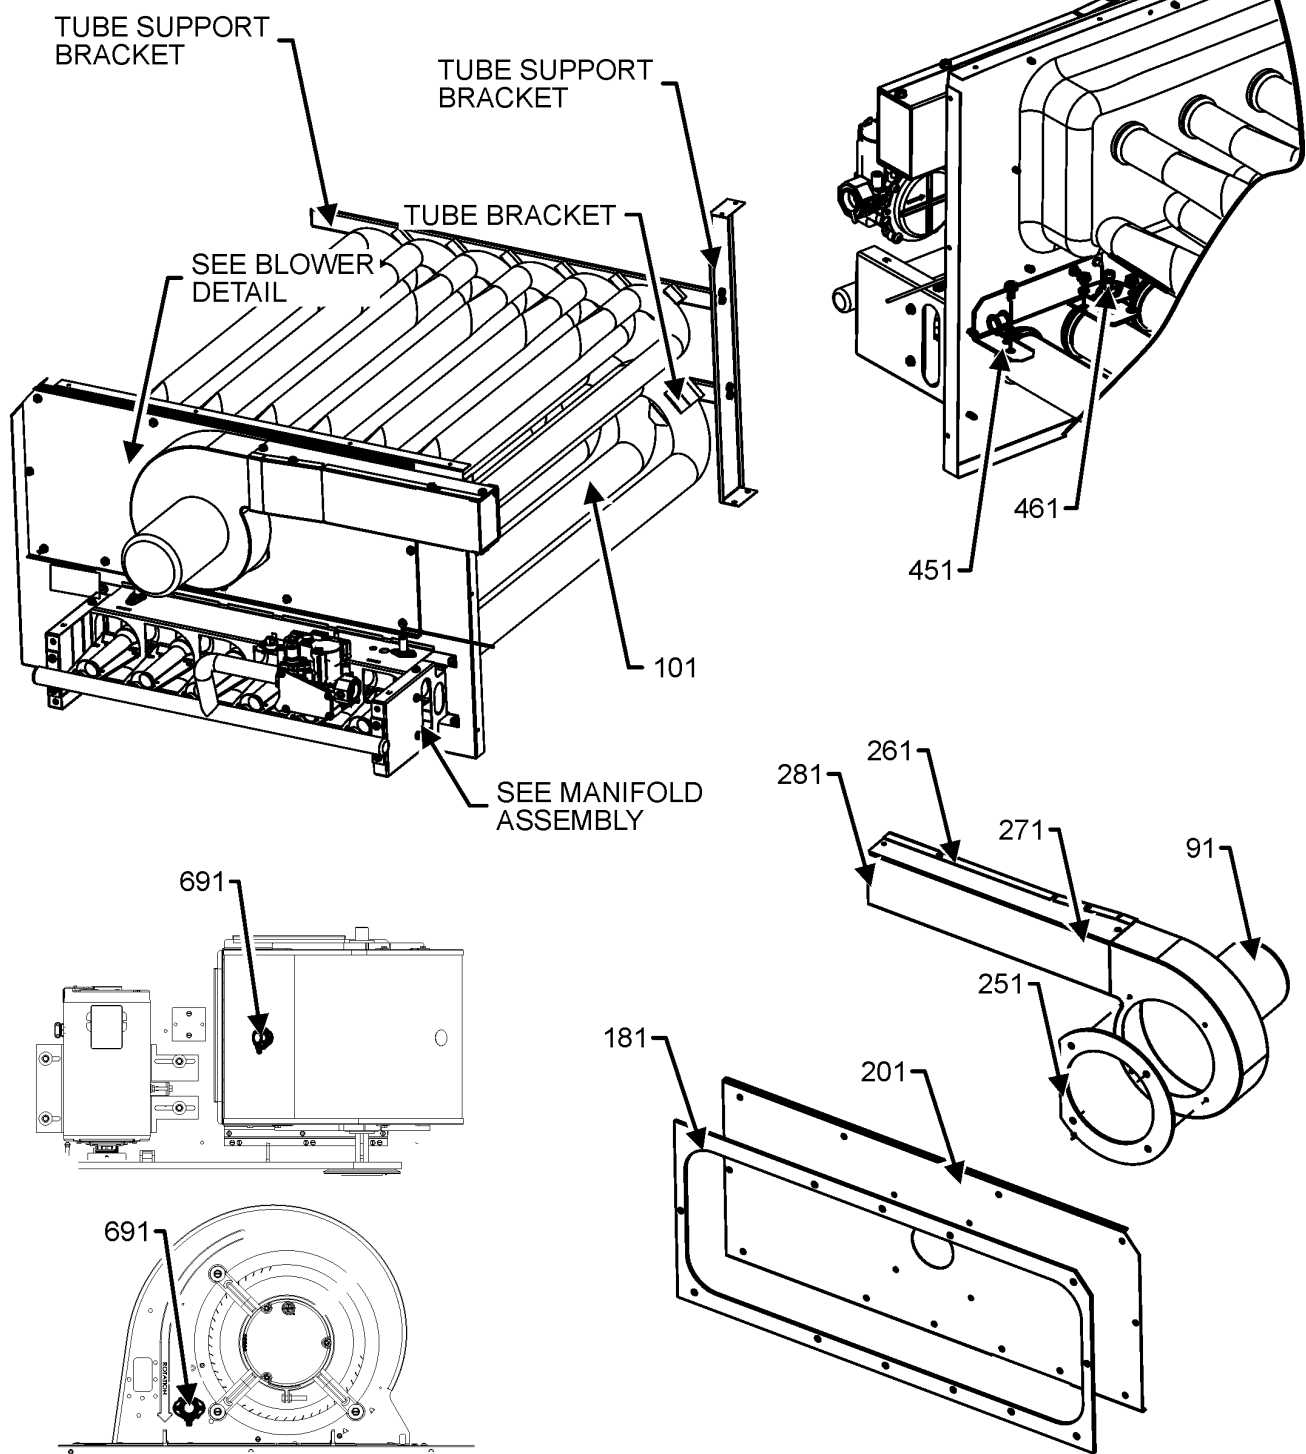

POSSIBLE LOCATIONS OF PRIMARY LIMIT ON THE BLOWER HOUSING

BLOWER DETAIL

HEAT EXCHANGE ASSEMBLY MAY DIFFER FROM WHAT IS SHOWN

Ref. Part No: No:	Description:	Ref. Part No: No:	Description:
Image 1:		Image 1:	
91 0131M00121	BLOWER-ID COMBUSTION (M1, M2, M3, M5, M8, M9, M10, M12, M13, M14, M15, M16, M17, M18, M19, M20, M22, M23, M24, M25, M26, M27, M28, M29, M31, M32, M34, M35, M36)	281 0121L01356	FLUE SIDE COVER (M4, M6, M7, M11, M21, M30, M33)
91 0131L00002	VENT MOTOR (M4, M6, M7, M11, M21, M30, M33)	281 0163L00072	SCREEN-FLUE
101 0270L01371	ASSY, PANEL, PARTITION/TUBE, 4 (M9, M14, M26, M28, M31)	451 0121L03948	BRACKET, PRIMARY LIMIT
101 0270L01373	ASSY, PANEL, PRTN/TUBE, 2 - SS (M1, M8, M16, M22, M34)	461 0130F00035	LIMIT, PRIMARY (M2, M3, M4, M5, M6, M13, M19, M20, M22, M23, M25, M31, M34, M35)
101 0270L01372	ASSY, PANEL, PRTN/TUBE, 3 - SS (M2, M12, M17, M20, M23, M25, M35)	461 0130F00067	LIMIT, PRIMARY (M1, M7, M8, M10, M11, M16, M30)
101 0270L01370	ASSY, PANEL, PRTN/TUBE, 5 - SS (M3, M4, M10, M13, M15, M19, M24, M27, M29, M32, M36)	461 0130F00071	LIMIT, PRIMARY (M9, M15, M21, M24, M27, M32, M33, M36)
101 0270L01369	ASSY, PANEL, PRTN/TUBE, 6 - SS (M5, M6, M7, M11, M18, M21, M30, M33)	461 0130M00658	LIMIT, PRIMARY (M17, M18, M26)
181 0154L00018	GASKET-ID BLOWER PLATE 2,4 (M1, M2, M8, M9, M12, M14, M16, M17, M20, M22, M23, M25, M26, M28, M31, M34, M35)	461 20162901	LIMIT, PRIMARY (M12, M28)
181 0154L00017	GASKET-ID BLOWER PLATE 6 (M3, M4, M5, M6, M7, M10, M11, M13, M15, M18, M19, M21, M24, M27, M29, M30, M32, M33, M36)	461 20162906	LIMIT, PRIMARY (M14, M29)
201 0121L02661	PLATE, ID BLOWER (M1, M22, M34)	461 0130F00123	LIMIT, RESET MAN (M8)
201 0121L02662	PLATE, ID BLOWER (M2, M17)	461 10123531	LIMIT-RESET MAN (M23)
201 0121L02663	PLATE, ID BLOWER (M3)	691 20162904	LIMIT, PRIMARY
201 0121L02665	PLATE, ID BLOWER (M19)		
201 0121L03335	PLATE, ID BLOWER (M4)		
201 0121L03362	PLATE, ID BLOWER (M8, M16)		
201 0121L03374	PLATE, ID BLOWER (M20)		
201 0121L03434	PLATE, ID BLOWER (M6, M7, M21)		
201 0121L03548	PLATE, ID BLOWER (M12)		
201 0121L03549	PLATE, ID BLOWER (M18)		
201 0121L03551	PLATE, ID BLOWER (M32)		
201 0121L03553	PLATE, ID BLOWER (M33)		
201 0121L03554	PLATE, ID BLOWER (M13, M27)		
201 0121L03663	PLATE, ID BLOWER (M10)		
201 0121L03664	PLATE, ID BLOWER (M11)		
201 0121L03667	PLATE, ID BLOWER (M15)		
201 0121L03719	PLATE, ID BLOWER (M5, M24)		
201 0121L03719	PLATE, ID BLOWER (M36)		
201 0121L03745	PLATE, ID BLOWER (M29)		
201 0121L03774	PLATE, ID BLOWER (M30)		
201 0121L03363	PLATE, ID BLOWER (M9, M25)		
201 0121L03365	PLATE, ID BLOWER (M14, M23, M26, M31, M35)		
201 0121L03569	PLATE, ID BLOWER (M28)		
251 0154L00007	GASKET-BLOWER/ORIFICE PLATE (M4, M6, M7, M11, M21, M30, M33)		
251 0154L00020	GASKET-ID BLOWER (M1, M2, M3, M5, M8, M9, M10, M12, M13, M14, M15, M16, M17, M18, M19, M20, M22, M23, M24, M25, M26, M27, M28, M29, M31, M32, M34, M35, M36)		
261 0121L01355	FLUE CHANNEL (M4, M6, M7, M11, M21, M30, M33)		
261 0121L00277	FLUE-CHANNEL (M1, M2, M3, M5, M8, M9, M10, M12, M13, M14, M15, M16, M17, M18, M19, M20, M22, M23, M24, M25, M26, M27, M28, M29, M31, M32, M34, M35, M36)		
271 0121L00278	FLUE-SIDE COVER (M1, M2, M3, M5, M8, M9, M10, M12, M13, M14, M15, M16, M17, M18, M19, M20, M22, M23, M24, M25, M26, M27, M28, M29, M31, M32, M34, M35, M36)		

Ref. Part
No: No: Description:

 
Ref. Part
No: No: Description:

Expanded Model Nomenclature


M1 - 0257L00122
M2 - 0257L00123
M3 - 0257L00124
M4 - 0257L00125
M5 - 0257L00126
M6 - 0257L00127
M7 - 0257L00128
M8 - 0257L00148
M9 - 0257L00150
M10 - 0257L00151
M11 - 0257L00152
M12 - 0257L00162
M13 - 0257L00164
M14 - 0257L00167
M15 - 0257L00168
M16 - 0257L00170
M17 - 0257L00172
M18 - 0257L00174
M19 - 0257L00176
M20 - 0257L00178
M21 - 0257L00198
M22 - 0257L00214
M23 - 0257L00216
M24 - 0257L00218
M25 - 0257L00220
M26 - 0257L00222
M27 - 0257L00224
M28 - 0257L00226
M29 - 0257L00228
M30 - 0257L00230
M31 - 0257L00256
M32 - 0257L00258
M33 - 0257L00260
M34 - 0257L00262
M35 - 0257L00264
M36 - 0257L00266

MANIFOLD ASSEMBLY

MANIFOLD DETAIL

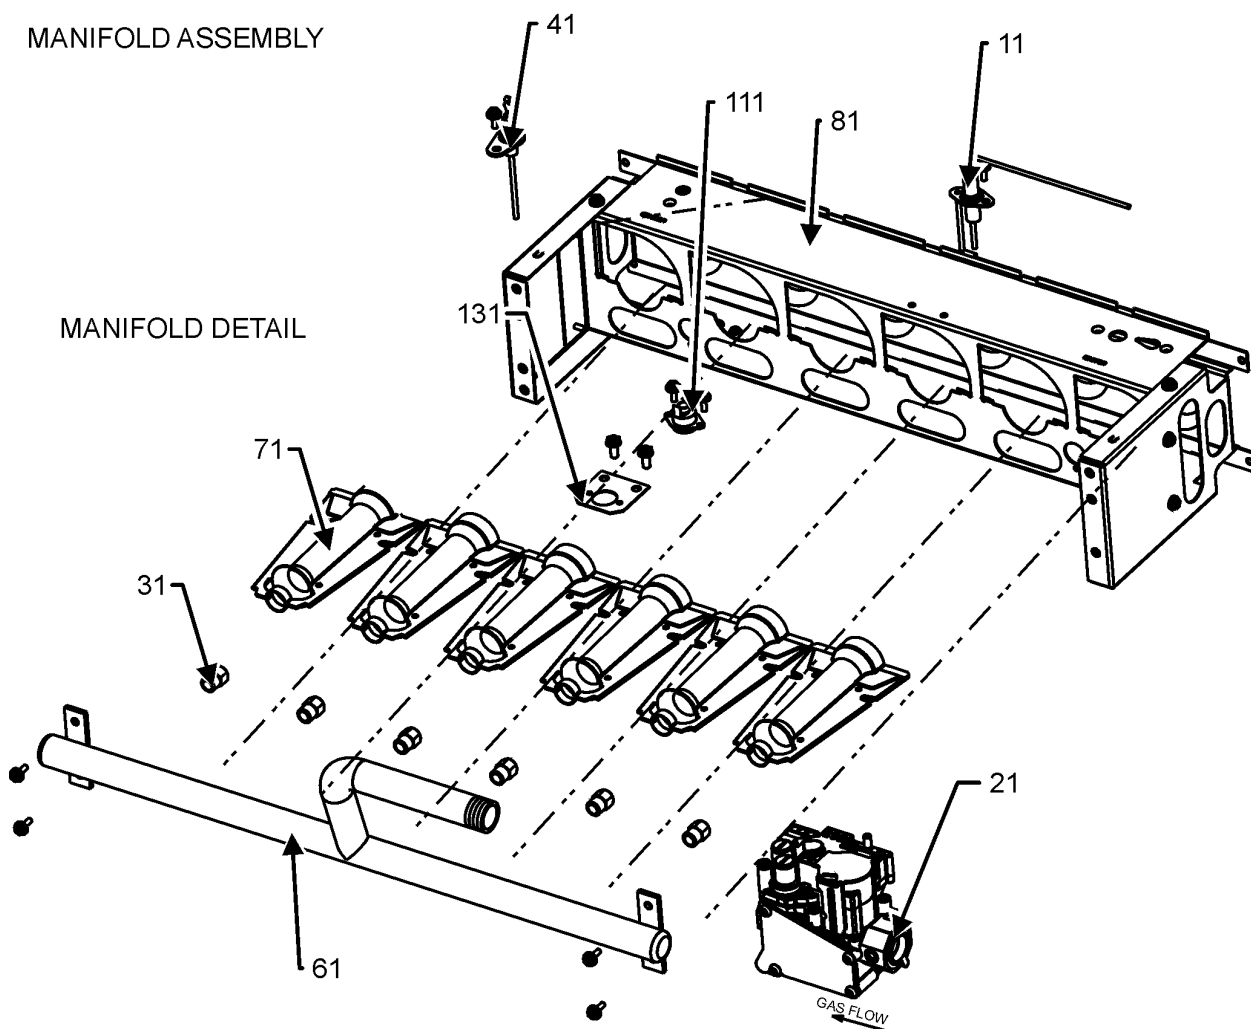

MANIFOLD ASSEMBLED

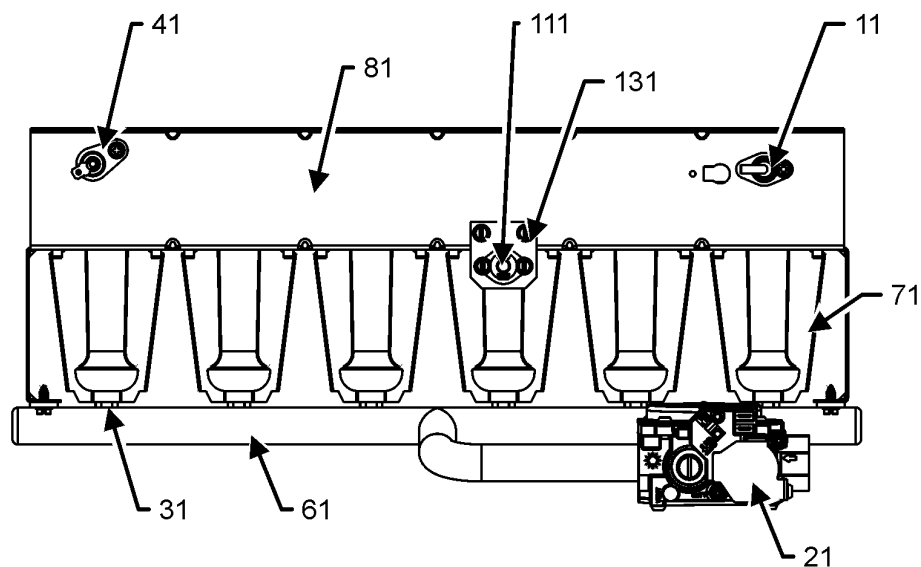 

MANIFOLD ASSEMBLY MAY DIFFER FROM WHAT IS SHOWN

Ref. Part No: No:	Description:	Ref. Part No: No:	Description:
Image 1:		Expanded Model Nomenclature	
11	20261709	IGNITOR	M1 - 0257L00122
21	0151F00000P	GAS VALVE - WHITE-RODGERS 2-STAGE	M2 - 0257L00123
31	0163F00018	ORIFICE (M1, M2, M3, M6, M7, M8, M9, M11, M12, M13, M14, M15, M16, M17, M19, M20, M21, M22, M23, M25, M26, M27, M28, M29, M30, M31, M32, M33, M34, M35)	M3 - 0257L00124
31	0163L00195	ORIFICE (M4)	M4 - 0257L00125
31	10716005	ORIFICE (M5, M10, M18, M24, M36)	M5 - 0257L00126
41	0130F00010	FLAME SENSOR	M6 - 0257L00127
61	0163L00143	MANIFOLD, GAS 3 BURNER (M2, M12, M17, M20, M23, M25, M35)	M7 - 0257L00128
61	0163L00027	MANIFOLD-GAS 2 BURNER (M1, M8, M16, M22, M34)	M8 - 0257L00148
61	0163L00026	MANIFOLD-GAS 4 BURNER (M9, M14, M26, M28, M31)	M9 - 0257L00150
61	0163L00029	MANIFOLD-GAS, 5 BURNER (M3, M4, M10, M13, M15, M19, M24, M27, M29, M32, M36)	M10 - 0257L00151
61	0163L00025	MANIFOLD-GAS, 6 BURNER (M5, M6, M7, M11, M18, M21, M30, M33)	M11 - 0257L00152
71	0163F00017	BECKETT BURNER (QTY 2)	M12 - 0257L00162
81	0121L01360	BRACKET, BURNER 2 (M1, M8, M16, M22, M34)	M13 - 0257L00164
81	0121L01362	BRACKET, BURNER 5 (M3, M4, M10, M13, M15, M19, M24, M27, M29, M32, M36)	M14 - 0257L00167
81	0270L00735	BRACKET-BURNER 6 (M5, M6, M7, M11, M18, M21, M30, M33)	M15 - 0257L00168
81	0121L02668	BURNER BRACKET-3 (M2, M12, M17, M20, M23, M25, M35)	M16 - 0257L00170
81	0121L02675	BURNER BRACKET-4 (M9, M14, M26, M28, M31)	M17 - 0257L00172
111	10123529	LIMIT-RESET MAN-GREEN (M4, M11, M14, M28, M29, M30, M33, M35)	M18 - 0257L00174
111	10123532	MANUAL RESET LIMIT 350°F (M1, M2, M3, M5, M6, M7, M9, M10, M12, M13, M15, M16, M17, M18, M19, M20, M21, M22, M24, M25, M26, M27, M31, M32, M34, M36)	M19 - 0257L00176
131	0121L00053	BRACKET-FLAME ROLLOUT	M20 - 0257L00178
NS	0121F00469	ORIFICE BRACKET-BURNER 2 (M1, M8, M16, M22, M34)	M21 - 0257L00198
NS	0121F00468	ORIFICE BRACKET-BURNER 3 (M2, M12, M17, M20, M23, M25, M35)	M22 - 0257L00214
NS	0121F00467	ORIFICE BRACKET-BURNER 4 (M9, M14, M26, M28, M31)	M23 - 0257L00216
NS	0121F00466	ORIFICE BRACKET-BURNER 5 (M3, M4, M10, M13, M15, M19, M24, M27, M29, M32, M36)	M24 - 0257L00218
NS	0121F00465	ORIFICE BRACKET-BURNER 6 (M5, M6, M7, M11, M18, M21, M30, M33)	M25 - 0257L00220
			M26 - 0257L00222
			M27 - 0257L00224
			M28 - 0257L00226
			M29 - 0257L00228
			M30 - 0257L00230
			M31 - 0257L00256
			M32 - 0257L00258
			M33 - 0257L00260
			M34 - 0257L00262
			M35 - 0257L00264
			M36 - 0257L00266