

# **Amana**® AIR COMMAND 90/95

## **USER'S INFORMATIONAL MANUAL MODEL: GUC/GUX (UPFLOW) HIGH EFFICIENCY GAS FIRED FURNACE**

**⚠ RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION**



### **WARNING**

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS
  - Extinguish any open flame.
  - Do not try to light any appliance.
  - Do not touch any electrical switch; do not use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.



### **WARNING**

Should overheating occur or the gas supply fail to shut off, shut off the manual gas valve to the furnace before shutting off the electrical supply.

### **IMPORTANT NOTE TO THE OWNER**

It is important that you fill out the owner's registration card and mail it today. This will assist Amana in contacting you if any service or warranty information should change in the future. When filling in the registration card, be sure to include the model, manufacturing and serial numbers plus the installation date.

Your warranty certificate is also supplied with the unit. Read the warranty carefully and note what is covered. Keep the warranty certificate in a safe place, so you can find it, if necessary.



### **WARNING**

To avoid personal injury, property damage or death, do not use this furnace if any part has been under water. Immediately call a qualified service technician to inspect the furnace and to replace any part of the control system and any gas control which has been under water.

### **IMPORTANT To the Installer:**

Affix this Manual and Installation Instruction adjacent to the appliance.

To the Owner: Keep the above literature in a safe place so you may refer to it at some future date.

Due to policy of continual product improvement, the right is reserved to change specifications and design without notice.

EFFECTIVE: MARCH, 1992

replaces 10127714  
10318804



# INDEX

|                                                  | PAGE |
|--------------------------------------------------|------|
| <b>I. GENERAL INFORMATION</b> .....              | 3    |
| — Unit Location .....                            | 3    |
| — Air Requirements .....                         | 3    |
| — Combustion Air .....                           | 4    |
| — Indoor Humidity .....                          | 4    |
| — For Propane Furnaces Only .....                | 4    |
| <b>II. GENERAL OPERATION</b> .....               | 5    |
| — Thermostat .....                               | 5    |
| — Electrical Components .....                    | 5    |
| — Operating Instructions .....                   | 5    |
| — Gas Valves .....                               | 6    |
| — Roll-out Protection Device .....               | 7    |
| — To Turn Off Furnace .....                      | 7    |
| — Electronic Control Module .....                | 7    |
| — Reset After Control Lock-out .....             | 7    |
| <b>III. GENERAL MAINTENANCE</b> .....            | 8    |
| — Air Filter Removal and Cleaning .....          | 8    |
| — Condensate Collection and Disposal .....       | 9    |
| — Induced Draft Motor Lubrication .....          | 9    |
| — Air Circulating Blower Motor Lubrication ..... | 9    |
| <b>IV. INSPECTION OF FURNACE</b> .....           | 9    |
| <b>V. IF YOU HAVE FURTHER QUESTIONS</b> .....    | 10   |
| <b>VI. SAFETY LABELS</b> .....                   | 11   |

Amana Refrigeration, Inc.  
Amana, Iowa 52204

# I. GENERAL INFORMATION

Your furnace is built to provide many years of safe and dependable service, providing it is properly installed and maintained. However, abuse and/or improper use can shorten the life of the furnace and create hazards for you, the user.



## WARNING

To avoid possible equipment damage, personal injury, fire or death, the following instructions must be observed regarding unit location, air requirements and operating procedures.

### UNIT LOCATION


1. The furnace area and the vicinity of any other gas appliances must be kept clear and free of combustible materials, gasoline, and other flammable vapors and liquids. Also, neither store nor use flammable items such as paint, varnish, or lacquer in the area.
2. Do not store or use chlorine or fluorine products (bleaches, cements, strippers, aerosols) near the unit. They can corrode the heat exchanger.
3. Do not use the furnace closet as storage for brooms, mops, brushes and oily rags or cloths. The area must be kept clear, clean and free of lint. Furnace must be kept free and clear of exposed or loose insulation materials in the area of installation. Examine the furnace area when the furnace or additional insulation is added since some insulation materials may be combustible.
4. Make sure the furnace is always connected to an approved vent, in good condition, to carry combustion products outdoors.
5. Familiarize yourself with the controls that shut off the gas and electrical power to the furnace. If the furnace is to be shut down at the end of the heating season, turn off both the gas and electrical power. For safety, always turn them off before performing service or maintenance on the furnace.
6. Establish a regular service and maintenance schedule to insure efficient and safe operation of the furnace.



## WARNING

Fire or personal injury may occur if unit clearances to combustible surfaces are not followed.

### UNIT CLEARANCES TO COMBUSTIBLE SURFACES

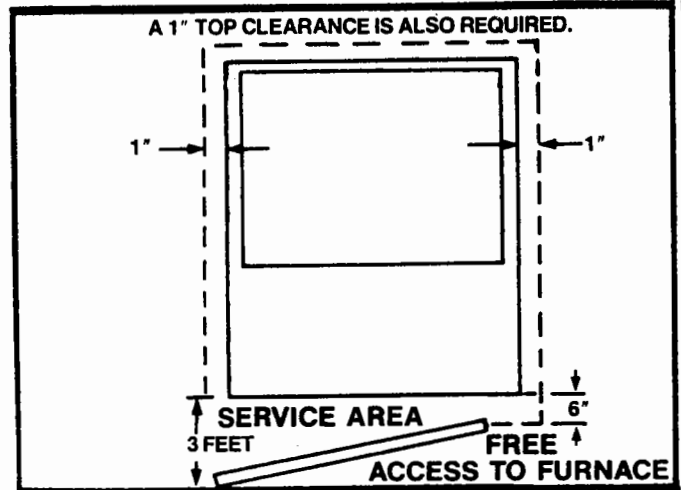

HOUSE BASEMENT OR HEATER CLOSET  
(TOP VIEW)

Fig. 1

### AIR REQUIREMENTS



## WARNING

Property damage, bodily injury or death may occur if the furnace and any other fuel-burning appliances are not provided with enough fresh air for proper combustion and ventilation of flue gases. Most homes require outside air to be supplied into the furnace area.

Improved construction and additional insulation in homes have reduced the heat loss and made these homes much tighter around doors and windows so that air infiltration is minimal. This creates a problem to supply combustion and ventilation air for gas fired or other fuel burning appliances. Any use of appliances that pull air out of the house (clothes dryers, exhaust fans, fireplaces, etc.) increases this problem and appliances could be starving for air.

If fuel-burning appliances are starved for air, the flue gases which these appliances produce as they operate may not vent outdoors properly, but remain in the home instead. These flue gases may include carbon monoxide.



## WARNING

Carbon monoxide can result in bodily injury or death from asphyxiation.



## WARNING

This product contains or produces a chemical or chemicals which may cause serious illness or death and which are known to the State of California to cause cancer, birth defects or other reproductive harm.

Carbon monoxide or "CO" is a colorless and odorless gas produced when fuel is not burned completely or when the flame does not receive sufficient oxygen.

**Be aware of these air starvation signals which indicate conditions that may result in carbon monoxide or that carbon monoxide may be present:**

1. Headaches-Nausea-Dizziness
2. Excessive humidity-Heavily frosted windows or a moist "clammy" feeling in the home.
3. Smoke from the fireplace won't draw up the chimney.
4. Flue gases from other appliances won't draw up the appliance flue pipe.

### COMBUSTION AIR

Normally the air for combustion and ventilation can be obtained from the basement or louvered closet door.

- a. If a furnace is installed in a closet and the closet door is louvered **DO NOT OBSTRUCT LOUVERS**. Louvers must be open and clear to provide combustion air to the furnace.
- b. If the furnace is installed in a confined space within a home and the air for combustion and ventilation enters the space through ducts from the outside...be sure to check the entering and outlet (grilled) openings so that they are always clear and clean.



### WARNING

**Do not partition off a small area around the furnace including a non-louvered door. This could obstruct the combustion air from reaching the furnace.**

### INDOOR HUMIDITY

Relative humidity is the amount of water vapor in the air relative to the amount the air can hold at the same temperature. Example: At 40% relative humidity, the air could hold  $2\frac{1}{2}$  times as much moisture ( $2.5 \times 40 = 100\%$ ) before becoming saturated.

The colder the air; the less moisture it can hold. As air is warmed, its ability to hold moisture is increased. Example: A winter day, outdoor temperature 10°F., and relative humidity of 70%. If that air enters a home and is warmed to 72°F. the relative humidity will drop to 6% (very dry) if no more moisture is added.

Relative humidity is important to your health and home as proper humidification helps cut down on incidences of respiratory illness and helps keep air cleaner and fresher.

A good relative humidity is one just high enough to barely start condensation along the lower edges or lower corners of the windows. More than that can be damaging.

Frequent fogging or excessive condensation on inside windows indicates the indoor humidity level is too high for outdoor weather conditions. Damage to the building may result if the condition persists. (Condensation on inside of storm windows indicates loose inside windows. Adding weatherstripping to tighten inside windows usually corrects this problem.)

The following table shows the recommended maximum indoor humidity in relationship to the outdoor temperatures.

| TEMPERATURE | HUMIDITY |
|-------------|----------|
| +20°F       | 35%      |
| +10°F       | 30%      |
| 0°F         | 25%      |
| -10°F       | 20%      |
| -20°F       | 15%      |

### FOR PROPANE FURNACES ONLY



### WARNING

#### PERSONAL INJURY HAZARD

**Iron oxide (rust) can reduce the level of odorant in propane gas. A gas detecting device is the only reliable method to detect a propane gas leak. Contact your local propane supplier about installing a gas detecting warning device to alert you in the event that a gas leak should develop.**

**Failure to detect a propane gas leak could result in an EXPLOSION or FIRE which could cause SERIOUS PERSONAL INJURY OR DEATH.**



### WARNING

**If your propane gas furnace is installed in a basement, an excavated area or a confined space, we strongly recommend that you contact your propane supplier about installing a warning device that would alert you to a gas leak.**

**...Propane gas is heavier than air and any leaking gas can settle in any low areas or confined spaces.**

**...Propane gas odorant may fade, making the gas undetectable except with a warning device.**

**An undetected gas leak would create a danger of explosion or fire. If you suspect the presence of gas, follow the instructions on the cover of this manual. Failure to do so could result in SERIOUS PERSONAL INJURY OR DEATH.**

## II. GENERAL OPERATION

### THERMOSTAT

There are many types and styles of thermostats but the operation is usually similar. **BE SURE TO BECOME FAMILIAR WITH YOUR THERMOSTAT.** The simplest type of thermostat only starts and stops the furnace to maintain the proper room temperature. The most widely used types will control both heating and cooling functions and will have a Fan Switch with Auto and ON settings. On Auto, the Circulating Air Blower will cycle on/off with the furnace but if switched to ON it will run constantly whether or not the furnace is on.

In addition there are thermostats that automatically switch from Heating to Cooling and with night setbacks. The night set-back, or multiple set-back type, will lower the temperature at night or during the day when no one is at home.

| COOL/HEAT SWITCH                          | FAN SWITCH |
|-------------------------------------------|------------|
| OFF                                       | AUTO       |
| System is off, no fan.                    |            |
| COOL                                      | AUTO       |
| System in Cooling, fan cycles off and on. |            |
| COOL                                      | ON         |
| System in Cooling, constant fan           |            |
| HEAT                                      | AUTO       |
| System in Heating, fan cycles off and on. |            |
| HEAT                                      | ON         |
| System in Heating, constant fan           |            |
| OFF                                       | ON         |
| System is off, constant fan               |            |

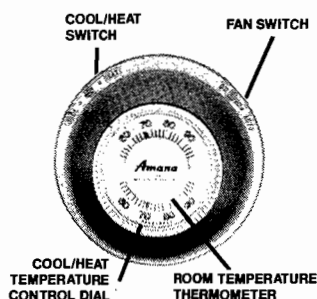


FIG. 2 — TYPICAL THERMOSTAT

### ELECTRICAL COMPONENTS

This furnace is equipped with an electronic ignition device which lights the burners. It also has a power vent blower to exhaust combustion products.

Keep the blower access door and upper access panel in place except for inspection and maintenance. An interlock switch prevents furnace operation if the blower door is not in place.



### WARNING

Electrical components are contained in both compartments. To avoid electrical shock, injury or death, do not remove any internal compartment covers. Contact a qualified servicer at once if an abnormal condition is noticed.

### OPERATING INSTRUCTIONS

1. Close the manual gas valve external to the furnace.
2. Turn off the electrical power supply to the furnace.
3. Set room thermostat to lowest possible setting.
4. Remove the upper door on the front of the furnace by turning the latch screw  $\frac{1}{4}$  turn.
5. This furnace is equipped with an ignition device which automatically lights the burner. Do not try to light burner by hand.

6. Turn the gas control valve knob clockwise to the "Off" position for either the White Rodgers 36-E gas valve (Fig. 3B) or the Honeywell VR-8205 gas valve (Fig. 3A). For the Robertshaw 7200 gas valve, push in and slide the lever to the "Off" position (Fig. 3C). Do not force.
7. Wait 5 minutes to clear out any gas. Then smell for gas, including near the floor. This is important because some types of gas are heavier than air.
8. If you have waited five minutes and you smell gas, immediately follow the instructions on the cover of this manual. If you have waited five minutes and do NOT smell gas, then turn the gas control knob counterclockwise to the "On" position for either the White Rodgers 36-E gas valve (Fig. 3B) or the Honeywell VR-8205 gas valve (Fig. 3A). For the Robertshaw 7200 gas valve, push in and slide the lever to the "On" position (Fig. 3C). Do not force.
9. Replace the door on the front of the furnace.
10. Open the manual gas valve external to the furnace.
11. Turn on the electrical power supply to the furnace.
12. Set thermostat to desired setting.

# GAS VALVE

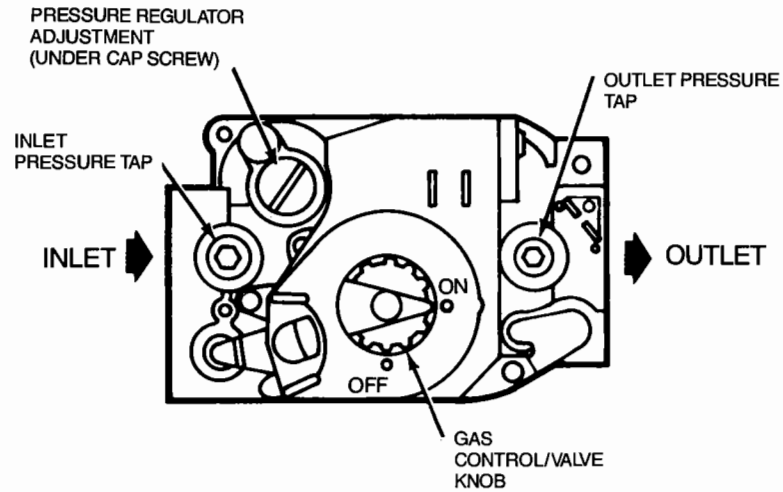


**FIG. 3A — HONEYWELL  
MODEL: VR-8205**

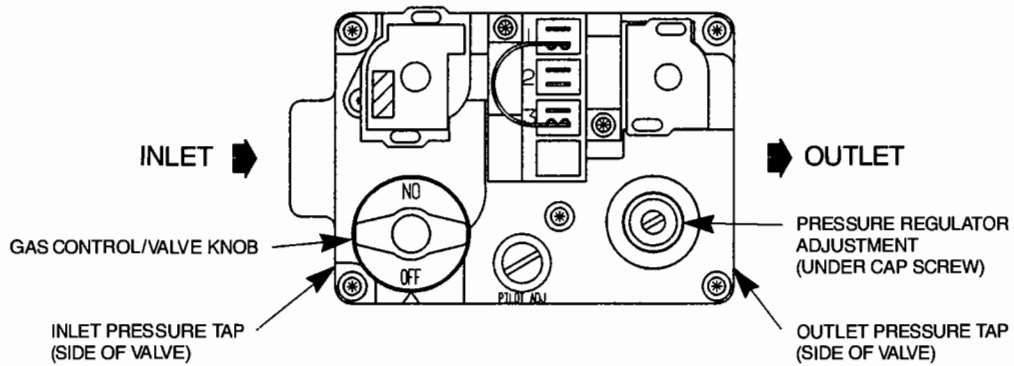


**FIG. 3B — WHITE RODGERS  
MODEL: 36E36 TYPE 230**

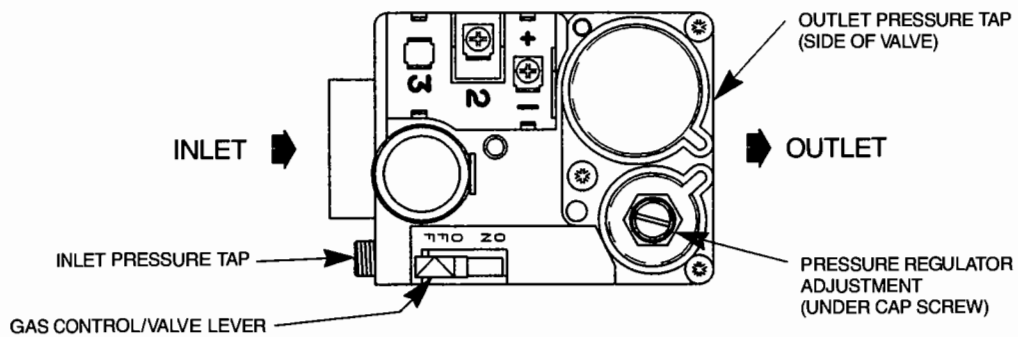


**FIG. 3C — ROBERTSHAW (GRAYSON)  
MODEL: 7200**

## ROLL-OUT PROTECTION DEVICE (FIG. 4)

If the flames from the burners are not properly drawn into the heat exchanger, a protection device will open causing the furnace to shut off. The protection device is located on the manifold assembly. (See Fig. 4)

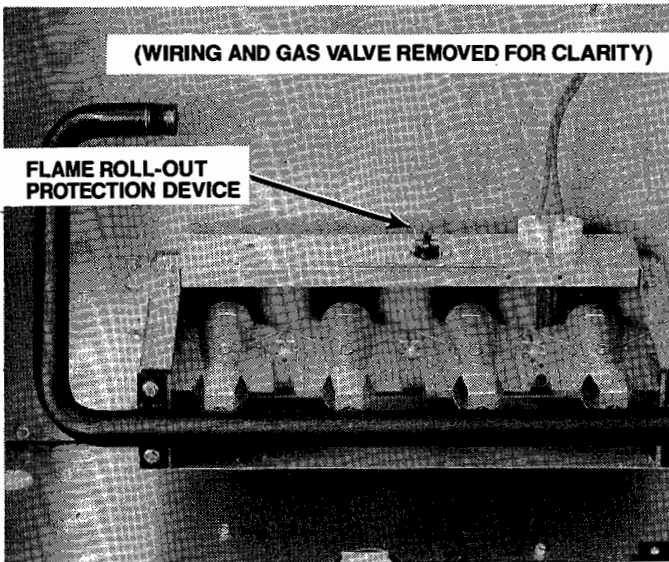


FIG. 4 — ROLL-OUT PROTECTION DEVICE



### WARNING

The cause must be investigated by a qualified servicer before any attempt is made to engage the roll-out protection device and turn the furnace back on.

## TO TURN OFF FURNACE

1. Set the thermostat to lowest setting.
2. Turn off the electrical power supply to the furnace.
3. Turn the gas control knob clockwise to the "Off" position for either the White Rodgers 36-E gas valve (Fig. 3B) or the Honeywell VR-8205 gas valve (Fig. 3A). For the Robertshaw 7200 gas valve, push in and slide the lever to the "Off" position (Fig. 3C). Do not force.

## ELECTRONIC CONTROL MODULE

This furnace is equipped with a self-diagnosing electronic control module. In the event a furnace component is not operating properly, the control module will repeatedly flash a red light on and off in a factory-programmed sequence, depending on the problem encountered.

If you suspect the furnace is not operating properly, look through the observation window in the blower access door (see Fig. 5) and make note of the number of flashes in the sequence. **Contact a qualified servicer for further information. Do not attempt to troubleshoot the problem yourself.**

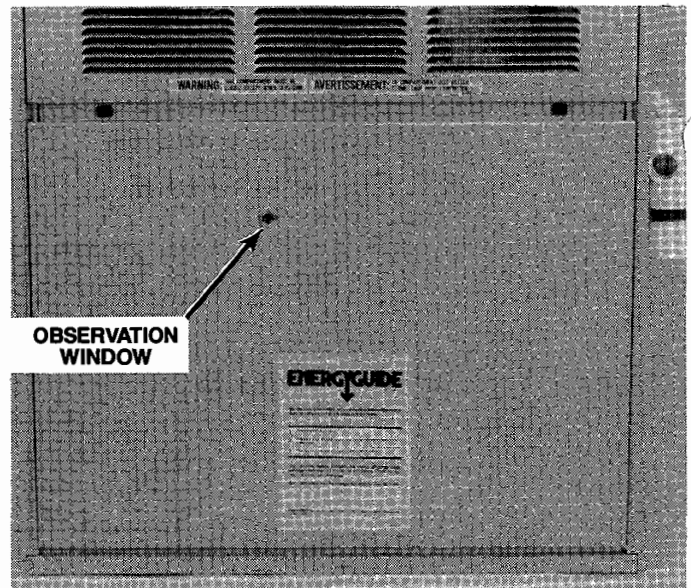


FIG. 5 — OBSERVATION WINDOW

## RESET AFTER CONTROL LOCK-OUT

If ignition has not been achieved for any reason after three ignition cycles, the electronic control module will lock-out the furnace. A lock-out causes both the air blower and the vent blower to run continuously, and ignition is no longer attempted. The control's diagnostic light will then repeatedly flash once and then pause. When this occurs, it may be necessary to reset the control by turning the thermostat setting below room temperature for thirty seconds and then returning the setting to the desired temperature. The control may also be reset after a lock-out by turning off the electrical disconnect switch to the furnace for thirty seconds.

**IMPORTANT:** If you have to frequently reset your furnace to obtain satisfactory operation, it may mean that a problem exists with your furnace that should be corrected. Contact a qualified servicer for further information.

### III. GENERAL MAINTENANCE

AT LEAST ONCE A YEAR, BEFORE THE HEATING SEASON BEGINS, have the furnace checked to be certain there is adequate combustion air and that the vent system is working properly.

Have the vent pipe checked to be sure it is not blocked by debris. Replace any damaged or leaking sections of the vent pipe.



#### WARNING

**To avoid electrical shock, injury or death, disconnect the electrical power before performing any maintenance.**

If you perform maintenance on the furnace yourself, remember that certain mechanical and electrical skills and tools are required to properly perform maintenance on the furnace. Personal injury or death may result if you are not properly trained. You should call your installing dealer or place of purchase if you are uncertain about your ability to perform maintenance.

#### AIR FILTER REMOVAL AND CLEANING



#### WARNING

**Never operate furnace without a filter installed as dust and lint will build up on internal parts resulting in loss of efficiency, equipment damage and possible fire.**

The filter in the furnace is designed for high velocity heating and cooling applications. Filters should be inspected and cleaned or changed every two months or as required. Remember that dirty filters are the most common cause of inadequate heating or cooling performance.

1. Turn off the power to the furnace.
2. Remove the lower door by turning the door latches  $\frac{1}{4}$  turn.
- 3a. If your furnace has side air returns, proceed as shown in Fig. 6. To remove the filter, grasp the lower portion of the filter, lift it up to disengage it from the lower railing (step 1), move it toward the blower (step 2), and lower it out of the top railing before pulling it out (step 3).

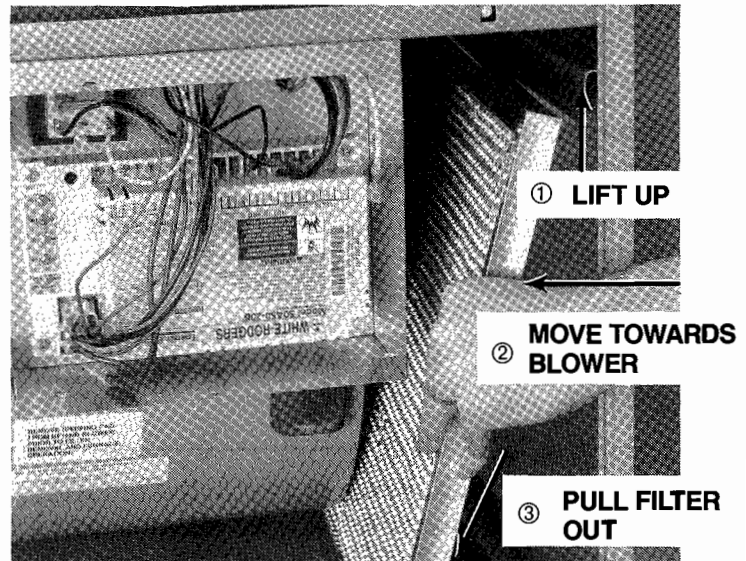


FIG. 6 — SIDE AIR RETURN FILTER REMOVAL

- 3b. If you have a bottom air filter, the filter is held in its location by a sheet metal retainer strap (see Fig. 7). To remove the filter, slide one end of the retainer toward you and remove the filter.



FIG. 7 — BOTTOM AIR RETURN AIR FILTER REMOVAL

4. Use a vacuum cleaner to clean out the blower area and the adjacent area of the return air duct.
5. Wash the filter with water and dry thoroughly. Spray both sides of the filter with a filter adhesive (filter adhesive may be found in many hardware stores).

Permanent filters should last several years. However, should one become torn or uncleanable, it should be replaced.

If you have side air return(s), replace the filter(s) with another permanent, washable type having dimensions of 16" x 25" x 1".

If you have a bottom air return, replace the filter with another permanent, washable type having dimensions as shown in the following chart.

| Model         | Filter Size    |
|---------------|----------------|
| GUC045/GUX045 | 14" x 25" x 1" |
| GUC070/GUX070 | 16" x 25" x 1" |
| GUC090/GUX090 | 20" x 25" x 1" |
| GUC115/GUX115 | 20" x 25" x 1" |

6. Re-install the filter. THE AIRFLOW DIRECTION ARROW ON THE FILTER MUST POINT TOWARD THE BLOWER.

## CONDENSATE COLLECTION AND DISPOSAL

(QUALIFIED SERVICER ONLY)

In the event the furnace's drain tubes or condensate collection standpipe assembly become blocked, the components may be removed, cleaned, and reinstalled.

## INDUCED DRAFT MOTOR LUBRICATION

(QUALIFIED SERVICER ONLY)

The induced draft motor may be lubricated each fall prior to the heating season.

## AIR CIRCULATING BLOWER MOTOR LUBRICATION

(QUALIFIED SERVICER ONLY)

The air circulating blower motor bearings are permanently lubricated, but for extended bearing life, oil may be added.

(Note: Some blower motors which are permanently lubricated do not have oil ports. Oil cannot be added to these motors.)

# IV. INSPECTION OF FURNACE



### WARNING

To avoid burns, shock, or death; the following procedures must be followed exactly, and in this sequence, before inspecting the furnace:

- 1 — Turn off gas by closing gas shutoff valve.
- 2 — Turn off electrical power by opening furnace power disconnect.
- 3 — If the furnace has been operating, wait 15 minutes for it to cool.

See following inspection procedures:

- A. The burner vestibule should be vacuumed clean annually.
- B. Inspect burners, mounting brackets, and all other parts in the vestibule area for signs of deterioration.
- C. Inspect the PVC flue pipe. See that it slopes upward away from the furnace and is physically sound without holes or leaks.

- D. Inspect the PVC flue outlet to check for restriction (wasps nest, etc.) and its general condition.
- E. Inspect the return air connection to the furnace to see that it is physically sound, is sealed to the furnace casing, and terminates outside the space containing the furnace.
- F. Check annually that the physical support of the furnace is sound without sagging, cracks, gaps, etc. around the base so as to provide a seal between the support and the base.
- G. Check annually that there are no obvious signs of deterioration of the furnace.
- H. Turn electrical power on and gas valve on. Set room thermostat to maximum setting so the furnace will fire. Inspect the main burner flames. Natural gas flames should be stable, soft and blue. Propane gas flames may appear slightly yellow. Dust may cause orange tips. Flames should extend directly outward from the burner without curling, floating or lifting off (Fig. 8).

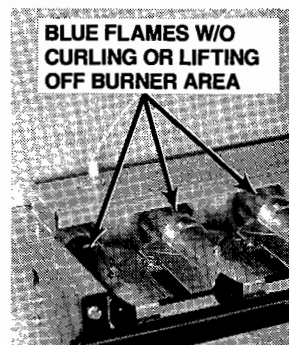


FIG. 8

The flames can be inspected through the sight glass on the front cover of the box. Only a qualified servicer should ever remove the cover.

- I. It is recommended that you call a qualified servicer to clean your furnace or perform preventive maintenance on a yearly basis.

## V. TO THE BUILDING OWNER WITH FURTHER QUESTIONS:

Most of your questions can be answered by our local Amana dealer. Check with your dealer first if you need any further information regarding the operation, maintenance, or service of your unit.

Then, if you should have any matters which are not resolved locally, or if you would like information on other heating and cooling products or kitchen appliances offered by Amana — please call us:

**CONSUMER INFORMATION LINE**



**AMANA TOLL FREE**

**1-800-843-0304**

**(Not a technical assistance line for dealers)**

Ask your participating Amana dealer about Amana's extended service plan. It adds to the strong warranty with additional parts and labor coverage.

**Amana™**  
**Asure™**  
EXTENDED SERVICE PLAN

## VI. SAFETY LABELS

**NOTE:** If safety labels are missing or illegible, contact your installing dealer or Amana Customer Service Department for ordering information.

**WARNING:** THIS COMPARTMENT MUST BE CLOSED EXCEPT WHEN SERVICING

**AVERTISSEMENT:** CE COMPARTIMENT DOIT RESTER FERMÉ, SAUF POUR L'ENTRETIEN

81280-1 LA



**WARNING:** IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE INJURY, PROPERTY DAMAGE, OR EXPOSURE TO SUBSTANCES IN FUEL OR FROM FUEL COMBUSTION WHICH CAN CAUSE DEATH OR SERIOUS ILLNESS, AND WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS, OR OTHER REPRODUCTIVE HARM. REFER TO THE USER'S INFORMATION MANUAL PROVIDED WITH THIS FURNACE. FOR ASSISTANCE OR ADDITIONAL INFORMATION, CONSULT A QUALIFIED INSTALLER, SERVICE AGENCY OR THE GAS SUPPLIER.

### FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

SEE INSIDE SURFACE OF LOUVERED DOOR FOR LIGHTING/OPERATING INSTRUCTIONS.

(aei)

10232003

### CAUTION

RISK OF ELECTRIC SHOCK.

DISENGAGE UNIT AND REMOTE DISCONNECT

(aei)

A3494001

| FOR YOUR SAFETY<br>READ BEFORE OPERATING                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |  | POUR VOTRE SÉCURITÉ<br>À LIRE AVANT L'EMPLOI                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <p><b>WARNING:</b> If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.</p> <p>A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.</p> <p>B. BEFORE CHECKING: Small air around the appliance area for gas. Be sure to smell near to the floor because some gas is heavier than air and will settle on the floor.</p> <p><b>WHAT TO DO IF YOU SMELL GAS:</b></p> <ul style="list-style-type: none"> <li>Do not try to light any appliance.</li> <li>Do not touch any electric switch; do not use any phone in your building.</li> <li>Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.</li> <li>If you cannot reach your gas supplier, call the fire department.</li> <li>Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it. Call a qualified service technician. Force or attempted repair may result in a fire or explosion.</li> <li>Do not use this appliance if any part has been damaged. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been damaged.</li> </ul> |  | <p><b>ATTENTION:</b> L'installation de ces instructions peut entraîner un incendie ou une explosion aux conséquences fatales.</p> <p>A. Cet appareil n'a pas de pilote. Il est doté d'un système d'allumage automatique. Ne tentez pas d'allumer le brûleur manuellement.</p> <p>B. AVANT L'USAGE: Vérifiez l'absence de gaz autour de l'appareil. Assurez-vous que le gaz se trouve au niveau du plancher car le gaz est plus lourd que l'air et a tendance de se condenser.</p> <p><b>EN CAS D'ODÉUR DE GAZ:</b></p> <ul style="list-style-type: none"> <li>Ne tentez pas d'allumer l'appareil électrique.</li> <li>Ne touchez à aucun commutateur électrique, ne téléphonez pas.</li> <li>Quel que le danger, immédiatement et avertissez les voisins.</li> <li>Appelez votre fournisseur de gaz.</li> <li>Si vous ne pouvez pas joindre votre fournisseur de gaz, appelez le service des pompiers.</li> <li>Utilisez uniquement votre main pour appuyer ou tourner la poignée du gaz. Ne tentez pas de réparer l'appareil. Si la poignée ne peut pas être poussée ou tournée à la main, n'essayez pas de réparer l'appareil. Appelez un technicien qualifié pour inspecter l'appareil et remplacer toute partie du système de commande ou du gaz qui a été endommagé.</li> </ul> |  |
| <p><b>OPERATING INSTRUCTIONS:</b></p> <ol style="list-style-type: none"> <li>STOP! Read the safety information above on this label.</li> <li>Set the thermostat to lowest setting.</li> <li>Turn on all electric power to the appliance.</li> <li>The appliance is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.</li> <li>Push and slide gas control lever to "OFF" position. Do not turn.</li> <li>Wait ten (10) minutes to clear out any gas. Then smell for gas. Pushing near the top. If you then smell gas, STOP! Follow "B" in the safety information above on this label.</li> <li>If you can't smell gas, go to the next step.</li> <li>Slide gas control lever to "ON" position.</li> <li>Replace access panel.</li> <li>Turn on all electric power to the appliance.</li> <li>Set thermostat to desired setting.</li> <li>If the appliance will not operate, follow the instructions on "B" in the safety information above on this label.</li> <li>Call Gas Appliance Service for further instructions or gas company.</li> </ol>                                                                                                                                                                                                                                                                                                                  |  | <p><b>MODE D'EMPLOI:</b></p> <ol style="list-style-type: none"> <li>ATTENTION! Lire attentivement la liste des messages de sécurité ci-dessus.</li> <li>Placez le thermostat à la position minimale.</li> <li>Coupez le courant électrique qui mène à l'appareil.</li> <li>Cet appareil est équipé d'un dispositif d'allumage automatique. Ne tentez pas d'allumer le brûleur manuellement.</li> <li>Poussez et faites glisser le levier de commande du gaz à la position "OFF" (fermé), n'appuyez pas de force.</li> <li>Attendez dix (10) minutes pour l'évacuation de la combustion du gaz. Puis sentez le gaz. Pousser près du haut. Si vous sentez le gaz, arrêtez-vous. Suivez les instructions ci-dessus (SECTION B). En l'absence de tout odeur de gaz, passez à l'étape suivante.</li> <li>Faites glisser le levier de commande du gaz à la position "ON" (ouvert).</li> <li>Remettez en place le panneau d'accès.</li> <li>Réinstallez l'appareil sur le réseau électrique.</li> <li>Ajustez le thermostat à la position désirée.</li> <li>Si l'appareil ne fonctionne pas, suivez les instructions ci-dessus (SECTION B) dans les instructions ci-dessus.</li> <li>Appelez le service de maintenance ou le fournisseur de gaz.</li> </ol>                                 |  |
| <p><b>TO TURN OFF GAS TO APPLIANCE:</b></p> <ol style="list-style-type: none"> <li>Set the thermostat to lowest setting.</li> <li>Turn off all electric power to the appliance if service is to be performed.</li> <li>Push and slide the gas control lever to "OFF" position. Do not turn.</li> <li>Replace access panel.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |  | <p><b>DIRECTIVES D'ARRÊT:</b></p> <ol style="list-style-type: none"> <li>Placez le thermostat à la position minimale.</li> <li>Coupez le courant électrique qui mène à l'appareil.</li> <li>Poussez et faites glisser le levier de commande du gaz à la position "OFF" (fermé), n'appuyez pas de force.</li> <li>Remettez en place le panneau d'accès.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |  |

10434801

To obtain the proper labels, you must be able to supply the Model, Manufacturing, and Serial numbers of the unit. While these numbers are recorded on the nameplate of the furnace, for your convenience, you may wish to record them here:

MODEL NUMBER: GU \_\_\_\_\_  
 MANUFACTURING NUMBER: P \_\_\_\_\_ F  
 SERIAL NUMBER: 9 \_\_\_\_\_